

# **CONTROLLED ATMOSPHERE IR BELT FURNACE**

## **Model LA-306 Operation & Theory**

**Infrared Furnace Setup, Operation,  
Theory and Troubleshooting Guide**  
3<sup>rd</sup> Edition

*Stephen L. Barber  
James M. Clark*



**Covers 2014 – 2017 LCI LA-306 Models**  
**Includes supplement for LCI refurbished RTC LA-306 models**

This manual contains operating instructions, theory and information regarding features and options which may or may not be included in your furnace system.

# Controlled Atmosphere IR Belt Furnace

Model: LA-306 (2014-2017)

Operation & Theory

Third Edition

Part No. 676-170306-01 CD

Part No. 676-170306-02 Perfect bound

Part No. 676-170306-03 Casewrap Hardcover

By: Stephen L. Barber, James M. Clark

Photography by: Chris Roode

Published by:

Lochaber Cornwall, Inc., 675 North Eckhoff Street, Ste D, Orange, California 92868 USA

714.935.0302

www.LCIfurnaces.com

service@furnacepros.com

Copyright ©2017 by Lochaber Cornwall, Inc., Orange, California, USA. All rights reserved.

ISBN: 978-1-304-36724-2

ID: 14066613

Manufactured in the United States of America.

Limit of Liability/Disclaimer of Warranty. The information in this document is subject to change without notice. The statements, configurations, technical data and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. The publisher and author make no representation or warranties with respect to the accuracy or completeness of the contents of this work and specifically disclaim all warranties including without limitation warranties of fitness for a particular purpose. No warranty may be created or extended by sales or promotional materials. The advice and strategies contained herein may not be suitable for every situation. If professional assistance is required, the services of a competent professional should be sought. Neither the publisher nor the author shall be liable for damages arising therefrom. Warranties for FurnacePros or Lochaber Cornwall, Inc. products and services shall be limited to those are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. THERE ARE NO OTHER WARRANTIES, EXPRESS, STATUTORY OR IMPLIED, INCLUDING THOSE OF MERCHANTABILITY AND OF FITNESS FOR PARTICULAR PURPOSE, NOR ANY AFFIRMATION OF FACT NOR REPRESENTATION WHICH EXTENDS BEYOND THE DESCRIPTION OF THE FACE HEREOF.

Users must take full responsibility for their application of any products, recommendations, processes or procedures mentioned in this document. Lochaber Cornwall shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is proprietary to Lochaber Cornwall, Inc.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical without express written permission from the publisher.

For information on parts, service and aftermarket products and reconditioned furnaces and to obtain technical support please contact FurnacePros Aftermarket Services at +1.714.935.0302.

Trademarks. LCI, LCI Furnaces, Lochaber Cornwall logo and shield and FurnacePros logo are trademarks or registered trademarks of Lochaber Cornwall, Inc. All other trademarks are the property of their respective owners.

Library of Congress Cataloging-in-Publication Data.

Controlled Atmosphere Belt Furnace, Operation & Theory, LA-306 Models / Stephen L. Barber, James M. Clark

ISBN 978-1-304-36724-2 (paper)

1. Infrared Furnace 2. IR Furnace Operation 3. IR Furnace Setup 4. Process Engineering  
5. Thermal Processing Theory 6. LA-306 I. Title.

Price US \$160.00

## INTRODUCTION

This manual covers the LCI LA-306, high quality controlled atmosphere infrared belt furnace designed for industrial production and laboratory continuous infrared thermal processing. This edition is for models manufactured in 2014 and later, controlled with a programmable logic controller (PLC) and the closed-loop belt speed control introduced in 2013.

Achieving high performance and high yields is attainable with careful adjustment of the sophisticated digital temperature controllers and exceptional process gas system provided on the LA-306. Infrared furnaces are highly responsive to critical temperature settings. With lamps as the primary heat source, the equipment is literally heating with light. The unique gas management system provides an extremely even distribution and well-regulated flow of gas throughout the process chambers. While the furnace is very easy to use, understanding how to control both the heat and gas flow is essential to achieve exceptional performance of the furnace. When the interaction of the control elements is well managed, the tool can achieve its potential. For many, our furnaces become regarded more than just an effective tool; they are viewed as a fine instrument that can produce results over a variety of thermal processing conditions.

## WHAT IS IN THIS MANUAL

This manual explains furnace equipment installation and setup, operation and troubleshooting of LA-306 PLC controlled furnaces manufactured by LCI. Some equipment described in this manual is optional or may not apply to your model as configured. The manual also covers aspects of infrared processing theory and techniques to assist you in achieving highly repeatable and reliable thermal processes.

Study this manual carefully. Experience has shown that operators who thoughtfully master the contents of this manual can become expert in understanding the process system capabilities of our infrared furnaces. In doing so, many are able to push the initial process performance envelope and thus achieve higher degrees in both process reliability and throughput than previously anticipated.

*Note that throughout this Owner's Manual the equipment is generally referred to as a furnace. A dryer is a furnace with only the top lamp elements installed or operated.*

## FORMATTING CONVENTIONS

This manual uses the following formatting conventions.



**DANGER: This signifies a potential threat to human safety.**

---

**Warning: This signifies a potential threat to equipment damage or product loss.**

---

Note: This signifies an important fact that could affect process control.

---

*Examples are shown in italic text.*

---

**Bold** text words or phrases embedded in this document, are terms with definitions in the glossary.

---

**Bold Underlined** text is used for pop-up windows, button descriptions & selector button/box choices.

---

Cross-references to "Section Titles" are bound with quotes.

---

(Optional ) accessories will be shown in parenthesis with a checkbox. If supplied, please check the box as appropriate.

## ABOUT LCI

LCI Furnaces specializes in the manufacture and sales of near infrared (0.5-5.5  $\mu\text{m}$ ) wavelength continuous belt dryers, ovens and furnaces worldwide. We provide the highest quality controlled atmosphere infrared thermal processing equipment, parts and service available anywhere.

We endeavor to improve our equipment design and performance. To this end, LCI encourages users to suggest ideas for improving designs and service. Additionally, we will discuss, in confidence, new thermal processing requirements, however difficult or routine they may be. If needed, LCI can design new equipment and features to meet the special and challenging needs our partners require.

Should you have a furnace operating question, contact LCI Furnaces or FurnacePros Technical Support.

## WHERE TO GET HELP

### Corporate Offices & Factory

Address: 675 N Eckhoff St, Ste D  
Orange, California 92868 USA  
e-mail: [admin@lochabercornwall.com](mailto:admin@lochabercornwall.com)  
Phone: +1 (714) 935-9781

### Technical Support & Service

Department: Aftermarket  
e-mail: [service@furnacepros.com](mailto:service@furnacepros.com)  
Phone: +1 (714) 935-0302 x230

### Aftermarket Parts Ordering

Department: Aftermarket  
e-mail: [parts@furnacepros.com](mailto:parts@furnacepros.com)  
Phone: +1 (714) 935-0302 x230

### Equipment Sales, Upgrades & Factory Reconditioning

Department: Sales & Marketing  
e-mail: [info@lCIFurnaces.com](mailto:info@lCIFurnaces.com)  
Phone: +1 (714) 935-0302 x250

### Websites


New Furnaces: [www.LCIfurnaces.com](http://www.LCIfurnaces.com)  
Aftermarket Parts: [www.FurnacePros.com](http://www.FurnacePros.com)

## GENERAL SAFETY GUIDELINES

The following set of guidelines is intended to create awareness of potential health and safety hazards.

### Normal Good Laboratory Practice

Normal good laboratory practices apply to the operation of IR furnaces. Do not use the space above the furnace as storage. Do not block the cabinet doors preventing the cooling of the electronic equipment inside. Do not operate with side covers off as this will prevent normal cooling of the electronic equipment thus voiding the warranty. Tuck electrical cords out of the way. Do not store flammables in the vicinity of the furnace and especially while operating the furnace with an oxygen atmosphere.

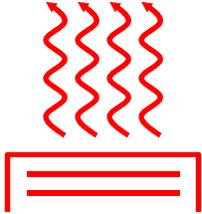


**HIGH TEMPERATURES.** In general, the operation of any furnace may expose operators or maintenance technicians to the risk of burns. After being processed in an infrared furnace, customer product may still be dangerous to handle. Each owner is responsible for providing a safe work environment and proper training in the handling of material being processed in a furnace.



**ELECTRICAL SHOCK HAZARD.** IR furnaces operate at high voltages. Operation with side covers off constitutes a safety hazard. Ensure that main power is off while side covers are removed.


Electrical shock hazards exist for those technicians who service the furnace. High voltages are required to operate the furnace and precautions must be taken to reduce the exposure to these elements. Again, it is the responsibility of the furnace owner to assure that only properly trained service technicians, familiar with high voltage operations be allowed to service the equipment

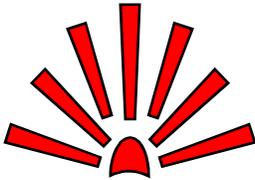


**EXPLOSION** Explosive dangers may exist in the high temperature process environment of the furnace. If the furnace operates with process gas containing hydrogen, the hydrogen content must be below 4.5% to assure the avoid the dangers of explosion. Furthermore, improper gas flow balance may draw oxygen rich air into the furnace, mixing with effluent gases and material from products, also creating a hazardous environment.



**HAZARDOUS MATERIALS.** Persons performing maintenance tasks such as replacement of lamps may become exposed to silica fiber compounds and/or toxic process residue. Such tasks should be performed by qualified persons wearing gloves, eye protection and a facemask to prevent inhalation of particulates or contact with toxic materials.

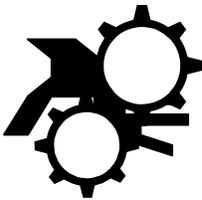

**ROTATING EQUIPMENT.** Roller dangers exist when working around the conveyor belt of the furnace. Care should be taken not to place hands or garments on or near the belt drive mechanisms when the conveyor system is operating as roller crush may occur. Operators should avoid walking near the open ends of the conveyor belt. Those who must be near the moving parts should wear close fitting clothing.

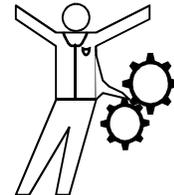

## SAFETY EQUIPMENT

### EMO Buttons



Each LA-306 infrared furnace is fitted with at least two SEMI S2 compliant Emergency Machine Off buttons (EMO's), one located at each end of the furnace. Each Emergency Machine Off button (EMO) is attached directly to a switch that automatically shuts down all furnace electrical systems. In many cases, process gas flow will remain on after power is shut off.

Locate the EMO buttons and insure their proper function prior to regular furnace operation.

### Panel Interlock Switches

The LA-306 has (3) interlock switches positioned to prevent operation of the furnace with high voltage panel access covers out of place. One is located on the control enclosure hinged back access door, and one on each of the lower side panels closest to the furnace entrance safeguarding access to the high voltage at the chamber lamps. The control enclosure top access plate is not interlocked.

Bypass this switch to allow furnace operation with the panels removed. Grasp the protruding switch and pull it out to override the switch (see Figures). Setting the panel switches in bypass mode is useful during SCR calibration and other troubleshooting.



Panel Switch in Normal Operation Position (in)



Panel Switch Installed - Bypass (out) Position



**DANGER: Bypassing the panel interlock switches increases maintenance personnel exposure to electrical hazards. The user must ensure that any interlock switches placed in override mode are returned to normal operation following any inspection or adjustment.**

### CDA Mixing

CDA Mixing options allows for introduction as GAS2, clean dry compressed air (CDA), nitrogen, forming gas or a specialty gas into specific furnace zones. When enabled, GAS2 can be added to the GAS1 flow introduced through the GAS FLOW CONTROL flowmeters (See Operation with FG below if operation with forming gas is contemplated.)

### Operation with FG (Forming Gas): Nitrogen/Hydrogen Premix

The CDA Mixing and Dual Gas options each provide for use of forming gas (FG) as a process gas. Use of FG is generally safe provided the concentration of hydrogen in the mixture is lower than the lower flammable limit of hydrogen. Hydrogen is flammable in concentrations of 4.5%-74% in air; explosive range is 18-59% in air. Dual gas furnaces are equipped with an audible alarm to indicate low nitrogen and forming gas supply pressure. CDA mixing furnaces are equipped with an audible alarm to indicate low nitrogen supply pressure only.



**DANGER: Except for furnaces specifically equipped with the hydrogen option, combustible gas should NOT be connected to the furnace. Forming gas or other gas mixtures which have a combustible gas component can be safely introduced into furnace provided the delivered concentration is below its lower flammable limit (LFL) in air.**

<b>INTRODUCTION</b>	<b>iii</b>	<b>Chapter 4</b>	<b>4-1</b>
<b>WHAT IS IN THIS MANUAL</b>	<b>iii</b>	<b>OPERATION</b>	<b>4-1</b>
<b>ABOUT LCI</b>	<b>iv</b>	4.1 Furnace Operation.....	4-1
<b>GENERAL SAFETY GUIDELINES</b>	<b>v</b>	4.2 Furnace Alerts & Alarms.....	4-5
<b>CONTENTS</b>	<b>vii</b>	4.3 Energizing Lamps.....	4-8
<b>Chapter 1</b>	<b>1-1</b>	4.4 Belt Speed Considerations.....	4-8
<b>FURNACE EQUIPMENT</b>	<b>1-1</b>	4.5 Testing Lamps.....	4-9
1.1 Furnace Description.....	1-1	4.6 Gas Flow Control.....	4-10
1.2 Furnace Views.....	1-2	<b>Chapter 5</b>	<b>5-1</b>
1.3 Thermal Process Elements.....	1-4	<b>MODIFYING CONTROL STRATEGIES</b>	<b>5-1</b>
1.4 Heat Transfer Methods.....	1-4	5.1 Modifying Zone Controllers.....	5-1
1.5 Controlled Atmosphere.....	1-5	5.2 Controller PID Tuning.....	5-4
1.6 Hermetically Sealed Systems.....	1-5	5.3 Automatic PID Group Selection.....	5-8
1.7 Furnace Process Equipment.....	1-5	5.4 Manual PID Group Selection.....	5-8
1.8 Load Station (LOAD).....	1-5	5.5 Viewing Controller Output Level.....	5-8
1.9 Entrance Baffle & Exhaust Stack (BE).....	1-5	5.6 Restoring Factory Presets.....	5-9
1.10 Chamber.....	1-6	<b>Chapter 6</b>	<b>6-1</b>
1.11 Transition Tunnel (TT).....	1-7	<b>OPTIONAL EQUIPMENT</b>	<b>6-1</b>
1.12 Cooling Tunnel (CACT).....	1-7	6.1 Options Summary.....	6-1
1.13 Unload Station (UNLOAD).....	1-7	6.1 Air Filter Regulator (AFR option <input type="checkbox"/> ).....	6-1
1.14 Console Controls & Indicators.....	1-8	6.2 Gas Reservoir (AR10 option <input type="checkbox"/> ).....	6-1
1.15 Programmable Logic Controller (PLC).....	1-15	6.3 Alternate Belt Speed (option <input type="checkbox"/> ).....	6-1
1.16 Furnace Auxiliary Equipment.....	1-16	6.4 Circuit Breaker (CB-3 option <input type="checkbox"/> ).....	6-2
<b>Chapter 2</b>	<b>2-1</b>	6.5 3-Phase Electrical (ELECT-3PH option <input type="checkbox"/> ).....	6-2
<b>INSTALLATION</b>	<b>2-1</b>	6.6 European Certification (CE option <input type="checkbox"/> ).....	6-3
2.1 Unpacking the Equipment.....	2-1	6.7 Load Extension (CXE15 option <input type="checkbox"/> ).....	6-3
2.2 Location & Initial Installation Work.....	2-1	6.8 Unload Extension (CXX15 option <input type="checkbox"/> ).....	6-3
2.3 Providing Power.....	2-6	6.9 Dual Gas (DGO option <input type="checkbox"/> ).....	6-4
2.4 Providing Process Gas.....	2-8	6.10 H2/N2 Mixing (HO/NHM option <input type="checkbox"/> ).....	6-4
2.5 Analyzers and Sampling.....	2-10	6.11 Intermediate Exhaust (IE option <input type="checkbox"/> ).....	6-5
2.6 Product Alert Sensors.....	2-11	6.12 Supply Gas Mixing (GSM option <input type="checkbox"/> ).....	6-6
2.7 Exhaust Requirements.....	2-12	6.13 Line Filter (LFI option <input type="checkbox"/> ).....	6-7
2.8 Water and Drain Connections.....	2-14	6.14 Moisture Analyzer (MA option <input type="checkbox"/> ).....	6-7
<b>Chapter 3</b>	<b>3-1</b>	6.15 Oxygen Analyzer (OA option <input type="checkbox"/> ).....	6-8
<b>INITIAL SETUP</b>	<b>3-1</b>	6.16 Sample System (OSS option <input type="checkbox"/> ).....	6-10
3.1 Emergency Machine Off Switch (EMO).....	3-1	6.17 Chamber Height, 1-in (PH1 option <input type="checkbox"/> ).....	6-11
3.2 Interlocks.....	3-1	6.18 Chamber Height, 4-in (PH4 option <input type="checkbox"/> ).....	6-11
3.3 Control Console.....	3-1	6.19 Belt Travel, Right to Left (RTL option <input type="checkbox"/> ).....	6-11
3.4 Functional Checkout.....	3-2	6.20 Product Alert (SENSLAS option <input type="checkbox"/> ).....	6-12
		6.21 Sample Ports (SSP option <input type="checkbox"/> ).....	6-13
		6.22 Ultrasonic Cleaner (UCD option <input type="checkbox"/> ).....	6-14

# Contents

---

6.23 Uninterruptable Power Supply (UPS option□).....	6-14
------------------------------------------------------	------

## Chapter 7 **7-1**

### **SERVICE & MAINTENANCE 7-1**

7.1 Service and Maintenance Access .....	7-1
7.2 Routine Maintenance .....	7-7
7.3 Daily Maintenance .....	7-7
7.4 Monthly Maintenance .....	7-7
7.5 Other Recommended Maintenance .....	7-7
7.6 Troubleshooting .....	7-11
7.7 Troubleshooting Process Problems .....	7-16
7.8 Service .....	7-18
7.9 Calibration.....	7-28

## Chapter 8 **8-1**

### **PROCESS ENGINEERING 8-1**

8.1 IR Furnace Process .....	8-1
8.2 Furnace Construction .....	8-3
8.3 Heating Chamber Design .....	8-4
8.4 PID Tuning Concepts .....	8-6
8.5 Gas Flow.....	8-8

## Chapter 9 **9-1**

### **THERMAL PROCESSING THEORY 9-1**

9.1 Infrared Waves .....	9-1
9.2 Infrared Heating .....	9-2
9.3 Thermal Process .....	9-3
9.4 Temperature Profiling .....	9-3

## Chapter 10 **10-1**

### **DRAWINGS & SCHEMATICS 10-1**

10.1 Furnace Arrangement LA-306 .....	10-2
10.2 Furnace Arrangement LA-306 Extended. ....	10-3
10.3 Furnace Chamber.....	10-4
10.4 Furnace Chamber, Intermediate Exhaust .....	10-5
10.5 Process Gas Plumbing, Single Gas .....	10-6
10.6 Process Gas Plumbing, Dual Gas .....	10-7
10.7 Supply Gas Mixing.....	10-8
10.8 Analyzer Gas Sample System.....	10-9
10.9 Safety Panel (208-240 Vac) .....	10-10
10.10 Safety Panel (380-415 Vac).....	10-11
10.11 Power Control, PLC LA-306.....	10-12
10.12 Frame Wiring.....	10-13
10.13 Control Console.....	10-14
10.1 Zone Control (After 2015).....	10-15
10.1 Element Wiring .....	10-16

10.1 Element Wiring – Hi Power.....	10-17
10.2 Analyzer & OSS Control .....	10-18
10.1 Product Alert with PLC.....	10-19

## Chapter 11 **11-1**

### **SPECIFICATIONS 11-1**

11.1 Furnace Specifications .....	11-2
11.2 Fuse List .....	11-3
11.3 Average 3-ph Current at Temperature ....	11-4
11.4 Average 1-ph Current at Temperature ....	11-5

## Chapter 12 **12-1**

### **APPENDIX - MSDS 12-1**

12.1 MSDS M0090 Fiberfrax® QF Cements..	12-2
12.2 MSDS M0042 Fiberfrax® Duraboard®...	12-8
12.3 Fiberfrax® Refractory Ceramic Fiber MSDS 0001 .....	12-14
12.4 MSDS M0055 Fiberfrax® High Purity Papers .....	12-20
12.5 Kaowool® Insulation MSDS 203 .....	12-26
12.6 MSDS 0732 RTV Silicone 732 .....	12-31
12.7 MSDS MagnaForm Boards .....	12-32

## Chapter 13 **13-1**

### **GLOSSARY 13-1**

## Chapter 14 **14-1**

### **RTC LA-306 SUPPLEMENT 14-1**

14.1 The Rebuilt RTC LA-306 .....	14-1
14.2 Console Controls & Indicators .....	14-2
14.3 Installation.....	14-5
14.4 Initial Setup .....	14-5
14.5 Operation .....	14-5
14.6 Modifying Control Strategies .....	14-5
14.7 Service & Maintenance.....	14-5
14.8 MSDS .....	14-5
14.9 Specifications.....	14-6
14.10 Average Current vs. Temperature.....	14-7
14.11 RTC LA-306 DRAWINGS.....	14-8
14.12 Furnace Arrangement, RTC LA-306 ....	14-9
14.13 Furnace Chamber, RTC LA-306 .....	14-10
14.14 Frame Wiring – Refurb RTC LA-306 ..	14-11

## Chapter 15 **15-1**

### **Furnace Configuration 15-1**

## FIGURES

Figure 1-1 Furnace Front Elevation .....	1-1	Figure 2-7 Belt Orientation .....	2-4
Figure 1-2 Furnace Front Elevation .....	1-2	Figure 2-8 Belt Splice .....	2-4
Figure 1-3 Entrance Elevation.....	1-2	Figure 2-9 Lower Access Panel .....	2-5
Figure 1-4 Exit Elevation .....	1-2	Figure 2-10 Belt Weight with packing.....	2-5
Figure 1-5 Exit Elevation .....	1-2	Figure 2-11 Belt Weight in Place.....	2-5
Figure 1-6 Rear Elevation .....	1-3	Figure 2-12 Proper Alignment of Belt Weight.....	2-5
Figure 1-7 Top Front View .....	1-3	Figure 2-13 Standard Back Entry Power Port.....	2-6
Figure 1-8 Process Sections .....	1-4	Figure 2-14 1-PH.....	2-6
Figure 1-9 Furnace Internals.....	1-5	Figure 2-15 208-240Vac, 3-PH, 4 wire.....	2-6
Figure 1-10 LA-306 Control Console .....	1-8	Figure 2-16 380-415Vac, 3PH 4-wire.....	2-6
Figure 1-11 Power control panel.....	1-8	Figure 2-17 Single Phase Circuit Breaker.....	2-7
Figure 1-12 Energize Lamps control panel.....	1-9	Figure 2-18 3-Phase Circuit Breaker (Option)....	2-7
Figure 1-13 Zone Temperature Controllers .....	1-10	Figure 2-19 Process Gas Connections – Single Gas.....	2-8
Figure 1-14 Temperature Controller Indicators and Control Buttons .....	1-10	Figure 2-20 Process Gas Connections - Dual Gas.....	2-8
Figure 1-15 Transport Panel .....	1-11	Figure 2-21 Process Gas Connections with.....	2-9
Figure 1-16 Test Panel.....	1-12	Figure 2-22 Oxygen analyzer on furnace.....	2-10
Figure 1-17 Zone Lamp Strings–Standard.....	1-12	Figure 2-23 Analyzer power & sample line connection.....	2-10
Figure 1-18 Zone Lamp Strings–High Power....	1-12	Figure 2-24 Install SENSLAS bracket .....	2-11
Figure 1-19 Status Panel .....	1-13	Figure 2-25 Adjust SENSLAS bracket height....	2-11
Figure 1-20 Gas Flowmeters - Single Gas.....	1-14	Figure 2-26 Install SENSLAS sensor over center of product lane .....	2-11
Figure 1-21 Gas Flowmeters - Dual Gas .....	1-14	Figure 2-27 Connect SENSLAS cable .....	2-11
Figure 1-22 PLC and Power Supply.....	1-15	Figure 2-28 Exhaust Connection.....	2-12
Figure 1-23 PLC CPU .....	1-15	Figure 2-29 Exhaust Connection Detail .....	2-12
Figure 1-24 Pressure Switch.....	1-16	Figure 2-30 Typical Hydrogen Furnace Process Gas Exhaust Connection .....	2-13
Figure 1-25 Motor Controller .....	1-17	Figure 2-31 UCD Water Connections .....	2-14
Figure 1-26 PCM21010A Motor Controller .....	1-17	Figure 3-1 EMO Switch .....	3-1
Figure 1-27 Drive Motor .....	1-18	Figure 3-2 Lower Panel Interlock .....	3-1
Figure 1-28 Transport Drive DC Motor.....	1-18	Figure 3-3 LA-306 Control Console ON.....	3-1
Figure 1-29 Encoder .....	1-18	Figure 4-1 Process Gas Control Flowmeters....	4-10
Figure 1-30 Encoder Connections .....	1-18	Figure 6-1 3-Phase Circuit Breaker (Option).....	6-2
Figure 2-1 Name Plate .....	2-1	Figure 6-2 3-Phase Electrical (Option).....	6-2
Figure 2-2 Shipping Brackets.....	2-2	Figure 6-3 CE Mark.....	6-3
Figure 2-3 Leveling Feet .....	2-3	Figure 6-4 Unload station with CXX15.....	6-3
Figure 2-4 Chamber Support Bracket .....	2-3	Figure 6-5 Control Enclosure showing 3 options:	6-4
Figure 2-5 Location of Support Brackets .....	2-3	Figure 6-6 LA-306 with Intermediate Exhaust.....	6-5
Figure 2-6 Belt Path .....	2-4		

# Contents

---

Figure 6-7 Supply Gas Mixing System Control Panel .....	6-6	Figure 7-19 PCL CPU ERR Indicator .....	7-16
Figure 6-8 MM510 Moisture Analyzer .....	6-7	Figure 7-20 Cut Wire at Ball Joint .....	7-18
Figure 6-9 EC913 Oxygen Analyzer .....	6-8	Figure 7-21 Second Cut at Opposite Side .....	7-18
Figure 6-10 Oxygen Analyzer with OSS .....	6-8	Figure 7-22 Remove belt wire .....	7-18
Figure 6-11 Oxygen Analyzer next to Control Console .....	6-8	Figure 7-23 Belt Splice .....	7-19
Figure 6-12 EC913 Oxygen Analyzer Rear View .....	6-9	Figure 7-24 Belt Orientation .....	7-19
Figure 6-13 EC913 Oxygen Analyzer Rear View .....	6-9	Figure 7-25 Belt Path .....	7-19
Figure 6-14 Sample System control panel .....	6-10	Figure 7-26 Insert Splice Wire .....	7-20
Figure 6-15 EC913 Oxygen Analyzer Rear Controls .....	6-10	Figure 7-27 Belt Splice .....	7-20
Figure 6-16 LTR and RTL Furnaces .....	6-11	Figure 7-28 Belt Weight in Place .....	7-20
Figure 6-17 SENSLAS System .....	6-12	Figure 7-29 Proper Alignment of Belt Weight....	7-20
Figure 6-18 SENSLAS Control Panel .....	6-12	Figure 7-30 Sprocket Alignment.....	7-21
Figure 6-19 Calibrate Sensor .....	6-12	Figure 7-31 Belt Tracking Adjustment Diagram .....	7-22
Figure 6-20 Sample Port Chamber Penetration .....	6-13	Figure 7-32 Drip Tray Cleaning Diagram .....	7-23
Figure 6-21 Zone Port Locations.....	6-13	Figure 7-33 Air Rake Alignment Ring.....	7-23
Figure 6-22 Ultrasonic Cleaner installation .....	6-14	Figure 7-34 Replacing the PLC Battery.....	7-24
Figure 7-1 Front Access Panels .....	7-1	Figure 7-35 Lamp Indicator Installation .....	7-26
Figure 7-2 Front Access Panels .....	7-2	Figure 7-36 Lamp in Panel .....	7-26
Figure 7-3 Rear Access Panels.....	7-2	Figure 7-37 Lamp Replacement.....	7-27
Figure 7-4 Control Enclosure Access Door Closed .....	7-3	Figure 7-38 Belt Speed Calibration Diagram ...	7-30
Figure 7-5 Access Door Open.....	7-3	Figure 7-39 Speed Adjust Tips .....	7-30
Figure 7-6 Lower Access Panel Removal .....	7-3	Figure 7-40 Belt Speed Display Meter .....	7-32
Figure 7-7 Lower Access Panel Installation .....	7-3	Figure 7-41 IPS Inlet Pressure Switch .....	7-34
Figure 7-8 Hanging Lower Access Panel.....	7-3	Figure 7-42 Air Pressure sensor .....	7-34
Figure 7-9 Hanging Lower Access Panel.....	7-3	Figure 8-1 IR Furnace Process Sections .....	8-1
Figure 7-10 Top Panel In Place.....	7-4	Figure 8-2 Heating Chamber Construction. End view .....	8-4
Figure 7-11 Entrance Panels.....	7-4	Figure 9-1 Dominant Wavelength Graph .....	9-1
Figure 7-12 Drive Enclosure Access Panels .....	7-4	Figure 9-2 Temperature Profile .....	9-3
Figure 7-13 Transport Drive (at Furnace Exit) ....	7-5	Figure 9-3 Equilibrium Profile .....	9-5
Figure 7-14 Typical Oxygen Analyzer furnace connections .....	7-5	Figure 9-4 Non-equilibrium profile .....	9-5
Figure 7-15 O2 Analyzer-front view .....	7-6	Figure 9-5 Temperature Profiling Apparatus.....	9-6
Figure 7-16 O2 Oxygen Analyzer rear view .....	7-6	Figure 9-6 Data Logger .....	9-6
Figure 7-17 Test Panel: Lamp String Failure Indicator .....	7-14	Figure 9-7 Brass Forging Sample .....	9-7
Figure 7-18 Tips on Adjusting Belt Speed.....	7-16	Figure 9-8 Metal Plate Sample.....	9-7
		Figure 9-9 Silicon Wafer Entering Furnace .....	9-7
		Figure 9-10 Recording Setpoints.....	9-7
		Figure 9-11 Brass forging sample exiting furnace.....	9-8

Figure 9-12 Sample plate exiting furnace .....	9-8	Figure 14-3 RTC LA-306 Control Console .....	14-2
Figure 9-13 880 °C Annealing profile .....	9-10	Figure 14-4 Minarik Motor Controller .....	14-3
Figure 9-14 880 °C Brass Forging profile .....	9-10	Figure 14-5 IronHorse Motor Controller .....	14-3
Figure 9-15 250 °C Curing Profile .....	9-11	Figure 14-6 PCM21010A Motor Controller.....	14-3
Figure 9-16 860 °C Thick Film profile .....	9-11	Figure 14-7 IronHorse GSD4-240-1C Motor Controller .....	14-3
Figure 9-17 860 °C Spike profile .....	9-12	Figure 14-8 Drive Motor .....	14-4
Figure 9-18 652 °C 1205 Brazing profile.....	9-12	Figure 14-9 Transport Drive DC Motor.....	14-4
Figure 14-1 RTC LA-306 Furnace Front Elevation .....	14-1	Figure 14-10 Encoder.....	14-4
Figure 14-2 Entrance .....	14-1	Figure 14-11 Encoder Connections .....	14-4

## TABLES

Table 1-1 Furnace Arrangement.....	1-6
Table 1-2 Furnace Lamps Wiring Configuration .....	1-6
Table 1-3 Initial Pressure Alarm Settings .....	1-16
Table 1-4 Transport Drive Components .....	1-17
Table 3-1 Functional Checkout.....	3-2
Table 4-1 Cold Start Up .....	4-1
Table 4-2 Changing the Profile .....	4-2
Table 4-3 Standby.....	4-3
Table 4-4 Resume Operation from Standby .....	4-3
Table 4-5 Shut Down .....	4-4
Table 4-6 Alerts & Alarms – Controls ON .....	4-5
Table 4-7 Alerts & Alarms – Lamps ON.....	4-6
Table 4-8 Over Temperature Alarm.....	4-7
Table 4-9 Lamp String Test .....	4-9
Table 5-1 Unlock/Lock Temperature Controller Keys.....	5-1
Table 5-2 Changing Temperature Deviation Alert Limits.....	5-2
Table 5-3 Changing Over temperature Alarm Limit.....	5-2
Table 5-4 Changing READY Light Limits.....	5-3
Table 5-5 Factory Default Zone Controller PID Parameters.....	5-4
Table 5-6 View & Change PID Parameter Group.....	5-5
Table 5-7 Zone Auto Tuning .....	5-6

## Contents

---

Table 5-8 Start/Stop Autotune Process .....	5-7
Table 5-9 View Temperature Controller Output Level .....	5-8
Table 5-10 Restore Temperature Controller Factory Settings.....	5-9
Table 5-11 Restore Temperature Controller Factory Operation Settings.....	5-10
Table 6-1 Summary of Advanced Features & Options .....	6-1
Table 7-1 Recommended Maintenance & Frequency .....	7-8
Table 7-2 Troubleshooting Power .....	7-12
Table 7-3 Temperature Control Troubleshooting.....	7-14
Table 7-4 Zones, Lamp Strings and Lamps.....	7-15
Table 7-6 Initial Alarm Settings .....	7-34
Table 9-1 Equilibrium Belt Speed Recommendations .....	9-9
Table 14-1 Transport Drive Components .....	14-2
Table 14-2 Applicable Drawings for LCI Rebuilt RTC LA-306.....	14-8